

## Be Safe When Installing Quick Couplings Inspection and Maintenance



### Plugs:

- Inspect for cracks, chips, dings or other damage.
- Clean as necessary using water and a mild detergent. External buildup may be removed using a wire brush, taking care not to mar the surface of the plug.
- Replace any damaged plug.



### Sockets:

- Inspect overall for cracks, dents or other damage.
- Inspect inside socket for damage or debris.
- Actuate all moving parts to ensure they operate freely with no scraping or binding.
- Clean as necessary using water and a mild detergent.
- Replace any damaged socket.

### Assemblies:

- Install the plug into the socket, making sure the parts connect easily and hold firmly
- Disconnect coupler, check that the plug and socket release easily and smoothly, with no scraping or binding.
- On BL (ball lock) and SL Series (with locking sleeve), rotate sleeve to the locked position and attempt to disconnect, pulling firmly to ensure the coupler stays connected.
- Rotate sleeve to the unlocked position, and ensure the coupler disconnects easily.
- If any damage, binding or unintended disconnecting is found, both the coupler and plug should be replaced.

